#### **FEATURES**

The 771XS+TCR ball valve is designed for the automatic opening / closing of pipes with non-loaded industrial fluids, up to a pressure of 16 bar. The narrow "wafer" construction of the valve makes installation easier compared with traditional "flange" models. It is a full-bore, EC certified valve. The ISO 5211 mounting pad enables the TCR actuator to be directly assembled. The latter is suitable for S3-S4 type service factor, installed indoors or outdoors under shelter.

### **AVAILABLE MODELS**

1.4408 stainless steel body. DN15 to DN100 diameters. PN16 RF wafer mounting.

Supply voltages: 24V AC, 24V DC and 230V AC.










#### **LIMITS OF USE**

Fluid pressure: PS	16 bar (20°C)		
Fluid temperature: WT	- 30°C / + 180°C		
Ambient temperature	-20°C / +60°C		
Comice feeten	S4 - 50% (TCR 02N-05N-11N)		
Service factor	S3 - 85% (TCR 20N-40N)		

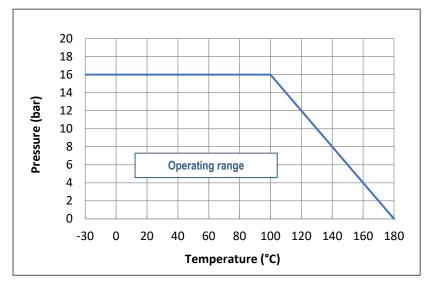



#### **DIRECTIVES AND MANUFACTURING STANDARDS**

OBJECT	Standard	ON	ОВЈЕСТ	Standard
Pressure Equipment Directive	DN15 and 20: not subject		Final test	NKS 12266
2014/68/EC	DN25 to DN100: category III	TÜV 0035	Material certificate	NKS 10204
Size	EN 12516-1		Connection Motorisation	ISO 5211:
Steel grades	EN 1503-1			




SECTORIEL S.A.
45 rue du Ruisseau
38290 UMINT QUENTIN-FALLAVIER – FRANCE
Telephone: +33 4 74 94 90 70 - Fax: +33 4 74 94 13 95
www.sectoriel.com / Email : sectoriel@sectoriel.fr

Pages	1/7
Ref.	FT771XS+TCR ENG
Rev.	06
Date	03/2024

## **CONSTRUCTION**

No.	Name	Material	No.	Name	Material
1	Body	1.4408 SS	12	Lever	304 SS
2	F	1.4408 SS	13	Lever nut	304 SS
3	Seats	PTFE + +15% GF	14	Pointer	304 SS
4	Ball	316 SS	15	Plastic coupling	PVC
5	Stem	316 SS	16	Locking device	304 SS
6	Body gasket	PTFE	17	Spring	316 SS
7	Stem gasket	PTFE + +15% GF	18	Antistatic device	316 SS
8	Cable gland gasket	PTFE	19	Stop plate	304 SS
9	O-ring	FKM	20	Spacer	304 SS
10	Spacer	304 SS	21	Screw	304 SS
11	Bellevile washer	301 SS			

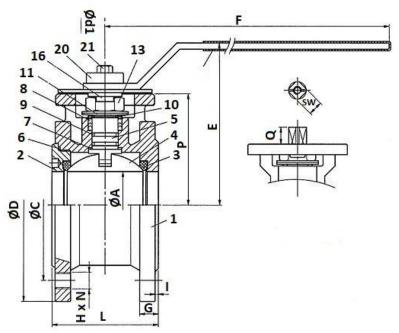

# **DIMENSIONS (mm)**

DN	15	20	25	32	40	50	65	80	100
Α	16	20	25	32	40	50	65	80	96
С	65	75	85	100	110	125	145	160	180
D	95	105	115	140	150	165	185	200	220
E	89	89	101	112	116	125	154	165	180
F	114	114	187	187	222	222	350	350	350
G	14	16	16	16	16	18	18	20	20
HxN	M12x4	M12x4	M12x4	M16x4	M16x4	M16x4	M16x4	M16x8	M16x8
L	42	44	50	54	68	82	103	122	152
- 1	2	2	2	2	3	3	3	3	3
Р	54	56	62.5	72	78	87.2	107	117.3	132.3
Weight (kg)	01:45	1.92	2.60	3.70	4.65	06:45	10:25	13:55	19.85



SECTORIEL S.A.
45 rue du Ruisseau
38290 UMINT QUENTIN-FALLAVIER – FRANCE
Telephone: +33 4 74 94 90 70 - Fax: +33 4 74 94 13 95
www.sectoriel.com / Email : sectoriel@sectoriel.fr

Pages	2/7
Ref.	FT771XS+TCR ENG
Rev.	06
Date	03/2024

### TCR ELECTRICAL MOTORISATION

The TCR motorisation proposed as standard comprises:

- IP67 plastic housing for actuator and steel gear box,
- a safety coefficient of 1.3 minimum compared to the nominal torque of the valve,
- an upstream / downstream pressure difference  $\Delta P$ =10 bar max.

The actuator's assembly is direct.

DN	Actuator	Power 230V AC / 24V AC/DC	Time 230V AC	Time 24 V AC-DC	Standard equipment of the actuator
15	TCR-02N	15	10s	10s	2 adjustable limit switches
20	TCR-02N	15	10s	10s	2 dry auxiliary contacts
25	TCR-05N	25	12s	12s	Thermal protection of the motor  2-3W anti-condensation resistance
32	TCR-05N	25	12s	12s	Stand-by manual control with key
40	TCR-05N	25	12s	12s	3D Position visual indicator
50	TCR-11N	100	10s	10s	Electrical connection:
65	TCR-11N	100	10s	10s	TRC02: 1 x PE M10 + 1.5m cable
80	TCR-20N	50	25s	25s	TCR05: 1 x PE M20 + 1.5m cable TCR11: 2 x PE M14 + 1.5m cable
100	TCR-20N	50	25s	25s	TCR20: 2 x PE M20 + 1,5m cable

For any other operating conditions, please contact us.

### **MOTORISATION OPTIONS**

There are many options, so please contact our sales service for more information on these:

2	Actuator dimensioned for an upstream / downstream pressure difference $\Delta P$ greater than 10 bar
3	NF actuator – return via condenser – TCR-KT32
4	High-speed actuator - TRC-NH
5	Smart actuator with manoeuvring time adjustment - TCR-C
6	Control actuator – TCR-T
7	NF control actuator – return via condenser – TCR-T-KT32
8	Field bus actuator - TCR-B
9	Actuator with in-built timer – TCR-D
10	Wireless actuator – TCR-R



SECTORIEL S.A.
45 rue du Ruisseau
38290 UMINT QUENTIN-FALLAVIER – FRANCE
Telephone: +33 4 74 94 90 70 - Fax: +33 4 74 94 13 95
www.sectoriel.com / Email : sectoriel@sectoriel.fr

Pages	3/7
Ref.	FT771XS+TCR ENG
Rev.	06
Date	03/2024

<sup>\*</sup> indicative time for actuator running empty

#### **ASSEMBLY AND MAINTAINANCE INSTRUCTIONS**

#### 1 - Installation

#### 1.1 - Checks

- Check that the material of the valve body is chemically compatible with the fluid.
- Check that the pressure and service conditions are compatible with the (P, T) diagram of the valve. See § "Service limits"
- Check that the fluid is clean and free of particles. The latter could scratch the ball and damage the seats, hence causing the valve to leak. If need be, install an upstream filter.
- Check that there is no risk of thermal expansion of the fluid, which could damage the seats. In the open position, a hole at the top of the ball balances the pressures between the body cavity and the flow of the fluid. As an option, we recommend a relief hole upstream of the valve for equalising the pressures for fluids such as ammonia, LPG, chlorine, etc.
- Check that the valve is not used for flow or pressure control since it is not intended for this use and there is a risk of premature wear of the seats, in particular in the event of high pressure and/or temperature. For this special application, preferably use our "V-port" 746XS version with a V-shaped hole in the ball. Please contact us.
- Check that the valve is not used on a gas which might condense at certain times during the process. In such a case, the pressure within the body cavity could become negative, which could lead to a significant deformation of the seats. Please contact us.
- Static electricity: the valve will be supplied with a ball-stem-body internal electrical continuity tester. If the service conditions require the electrical continuity of the installation, check its earthing.
- Check the perfect alignment of the upstream and downstream pipe installation. Wafer-type valves such as 771XS are sensitive to this parameter. An alignment fault would lead to a ball blockage.
- Also check the pipe installation support. In the event of a fault of the latter, the valve would undergo too high mechanical stress which could lead to a ball blockage or to leaks.
- o On pipe installation for hot fluids, check for the presence of an expansion compensator. Their absence would lead to a high mechanical stress which could lead to blocking the ball.
- o If the valve is installed in an explosive zone, you must follow the additional "IMEVMATEX" instructions.

#### 1.2 - Storage before installation

Follow our general "IMESTOCK" instructions for storage.

#### 1.3 - Installation

- Before any installation, isolate the piping upstream and downstream, depressurize the piping and bring the installation to ambient temperature. Carefully clean the piping of any particle (foreign body, dust, rust, etc.) or shavings by water rinsing or air blowing.
- o For valves with a size above DN50, plan to use a hoist.
- Remove the protective masks from the valve flanges.
- o Check the cleanliness of the internal surfaces of the valve and if need be, clean them.
- O Direction of mounting: the valves do not have a preferred direction of mounting, unless a relief hole was drilled into the ball.
- Check that the standards for the valve flanges (PN16 as per1092-1) and the pipe installation, are the same.
- Select flange gaskets suitable for the fluid and the flange standard for the valve (PN16).




Pages	4/7
Ref.	FT771XS+TCR ENG
Rev.	06
Date	03/2024

o Stock up on hex-head nuts and bolts as shown in the table below:

DN	Screw	Number	Tightening torque (Nm)	DN	Screw	Number	Tightening torque (Nm)
15	M12 x 30	4	35	50	M16 x 40	4	86
20	M12 x 35	4	35	65	M16 x 40	4	86
25	M12 x 35	4	35	80	M16 x 45	8	86
32	M16 x 35	4	86	100	M16 x 45	8	86
40	M16 x 35	4	86				

 Screw-in the screws through the flanges as shown in the diagram below and apply the torques shown in the table below. Follow a symmetrical tightening cross pattern in order to apply a uniform tightening torque on the gasket seats.

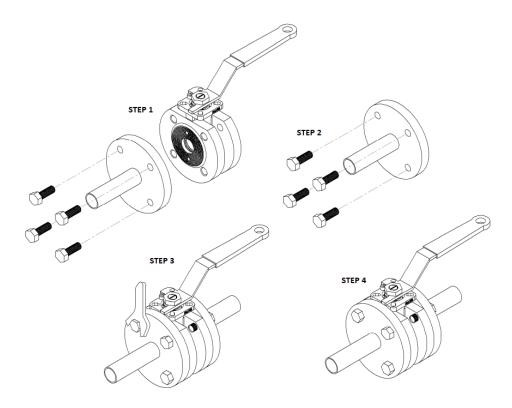

- o Check the sealing of the connection using a suitable test (hydrostatic test or leak detection spray).
- Hydraulic test of the installation
  - Valves were tested at the factory at 1.5 x WP.
  - o If a hydrostatic test is carried out on the installation, do not exceed the authorised pressure.

#### 2 - Service

- o If a hot fluid flows across the valve, do not touch the valve surface.
- o Always operate the valve slowly and smoothly.
- Opening clockwise, closing anti-clockwise.




SECTORIEL S.A.	
45 rue du Ruisseau	
38290 UMINT QUENTIN-FALLAVIER – FRANCE	
Telephone: +33 4 74 94 90 70 - Fax: +33 4 74 94 13	3 95
www.sectoriel.com / Email : sectoriel@sectoriel.fr	

Pages	5/7
Ref.	FT771XS+TCR ENG
Rev.	06
Date	03/2024

#### 3 - Servicing


#### 3.1 - Frequency of servicing

- The servicing frequency depends upon the use of the valve, of the type of fluid, of its velocity, of its frequency of operation, of the cycles of rise and fall in pressure and temperature.
- o Before any intervention, isolate the upstream and downstream pipe installation using the valves provided for this purpose. Depressurize the pipe installation and bring it to ambient temperature.
- o If the lever has to be removed, do that before disassembling the body.
- o To remove the body, unscrew the lateral tip with special tools as shown in the diagram below. If you do not have such tools, contact our after-sales department.
- o To remove the ball from the body, turn the stem by a quarter turn.

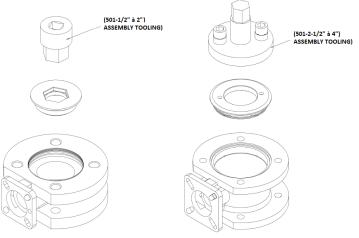

### 3.2 - Inspecting the state of the valve and possible repair

- Check the state of the ball (Item 4): it has to be clean and unscratched. If the cleaning or polishing is not possible, replace it (see the § on spare parts).
- Check the state of the seats (3.1 and 3.2): they
  must not be deformed, nor scratched, nor worn, or
  dirty. Otherwise, replace them with parts from the
  gasket kit.
- Check the state of the packing gland (7 and 8): no leak should be found at the stem and the rings should not be excessively worn. If need be, replace the gaskets.
- Check the state of the body gasket. Replace it, if need be.
- Reassemble the different parts of the valve, following the tightening torques shown in the table below.
- Check that the stem manoeuvring is smooth.
   Perform about ten manoeuvres.

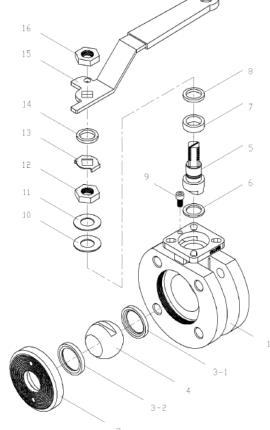



SECTORIEL S.A.
45 rue du Ruisseau
38290 UMINT QUENTIN-FALLAVIER – FRANCE
Telephone: +33 4 74 94 90 70 - Fax: +33 4 74 94 13 95
www.sectoriel.com / Email : sectoriel@sectoriel.fr

Pages	6/7
Ref.	FT771XS+TCR ENG
Rev.	06
Date	03/2024

### TABLE OF THE TIGHTENING TORQUES OF THE TIE-BOLTS AND OF THE LEVER NUT


DN	Tightening torque for the insert (Nm, item 2)	Lever nut (Nm)
15	29.4	3.4
20	58.8	3.4
25	88.2	4
32	196.1	4
40	294.1	5
50	490.2	5
65	588.2	6
80	686.3	6
100	686.3	6

#### **SPARE PARTS**

DN	Gasket kit	Ball	Handle
Reference mark	3-6-7-8	4	11
15	982702	Please contact us.	982802
20	982703	Please contact us.	982802
25	982704	980034	982804
32	982705	980035	982804
40	982706	Please contact us.	982806
50	982707	980037	982806
65	982708	980038	982808
80	982709	980039	982808
100	982710	Please contact us.	982808



Pages	7/7
Ref.	FT771XS+TCR ENG
Rev.	06
Date	03/2024

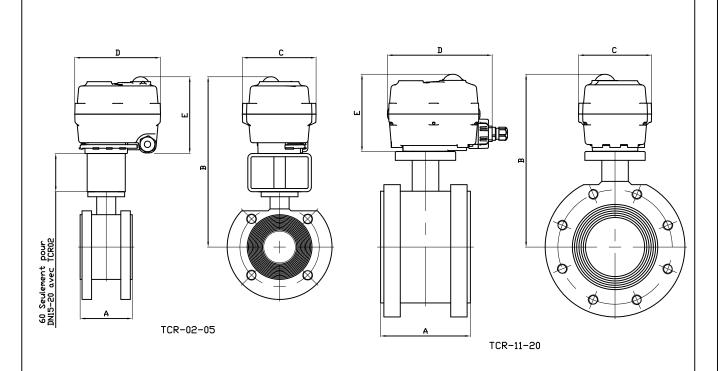

DN	15	20	25	32	40	50	65	80	100
SERVO	TCR02	TCR02	TCR05	TCR05	TCR05	TCR11	TCR11	TCR20	TCR20
Α	42	44	50	54	68	82	103	122	152
В	204*	206*	183.5	193	199	209.2	229	289.3	304.3
С	70	70	111	111	111	115	115	160	160
D	104	104	132	132	132	165	165	270	270
E	90	90	121	121	121	122	122	172	172
POIDS KG	2.61	3.01	4.3	5.4	6.55	9.61	13.32	16.8	26.1

\*Montage avec platine H=60

Informations données à titre indicatif et sous réserve de modifications éventuelles data subject to alteration  $\parallel$ 

				DN80:TCR20 ald TCR11 Ajout DN100	23/03/2021	Α
Ech:/	Date :17/09/2019	Dessiné par :E.D.	Tolérances générales: +/- 0.2	Modifications	Date	REV.
RD:	BINET A TOURNAN	Matiére :				
	SERVOMOTEUR	Poids (Kg) :				
	SECTORIEL  45, Rue du Ruisseau  38297 SAINT QUENTIN FALLAVIER		Traitement : SANS			
			Plan n° Ens	1394	Α	

#### **FEATURES**

The TCR-N electric actuators are intended for motorising ¼ turn valves with a torque of 15, 20, 50, 110, 200 or 400 Nm. With a compact construction and plastic housing, they are especially well suited for motorising ball valves and butterfly valves. Several variants offer advanced functions. IP67 leak-tightness: to be used indoors and, possibly, outdoors under a shelter. Possible installation in parallel. Manual control with a key.

### **AVAILABLE MODELS**

Supply voltages: 230V AC, 24V AC/DC, 12V DC.

#### **LIMITS OF USE**

IP Code	IP 67
Ambient temperature	- 20°C / +60°C
Service factor	S4 - 50% (TCR 02-05-11)
	S3 - 85% (TCR 20-40)



### **MECHANICAL FEATURES**

Gear box	treated steel pinions
Torques	15 - 20 - 50 - 110 - 200 - 400 Nm
Angle of rotation	90° +/- 2°
Dodutshing	Without (TCR 02-05-11)
Declutching	With (TCR 20-40)
Override control	By key







Actuator	TCR 02N				TCR 05	V
Torques (Nm)	15	20	20	50		
Voltage	12V DC	24V AC-DC	95-265V AC-DC	12VDC 24V AC-DC 95		95-265V AC-DC
Manoeuvring time (s)	15	10	10	12 12 12		12
ISO 5211:	F03/F05 - star 11				F05/F07 - st	ar 14

Actuator		TCR 11	N	TCR 20N			TCR 40N			
Torques (Nm)		110			200			400		
Voltage	12V DC	24V AC-DC	95-265V AC-DC	12VDC	24V AC-DC	95-265V AC-DC	12V DC	24V AC-DC	95-265V AC-DC	
Manoeuvring time (s) 10 10 10		25 25 25			25	25	25			
ISO 5211:	F05/F07 - star 17			F07/F10 - star 22			F07/F10 - star 22			

Information given as an indication only, and subject to possible modifications



1/8
FT2411 ENG
06
10/2023

## **ELECTRICAL FEATURES**

Actuator	TCR 02N	TCR 05N				
Motor protection	Thermal switch					
Limit switches	2 adjustable switches					
Auxiliary switches	2 adjustable dry switches					
Anti-condensation	integrated					
Electrical connection	PE M10 + 1.5m cable					

Actuator	TCR 02N				TCR 05	V
Voltage	12V DC	24V AC-DC	AC-DC 95-265V AC-DC		24V AC-DC	95-265V AC-DC
Power (W)	15	15	15	25	25	25
Current (A)	1,5	1,5	0,09	1,67		0,18 - 0,37
Fuse Protection (A)	5	5	1	8		1 - 2

Actuator	TCR 11N	TCR 20N	TCR 40N				
Motor protection	Thermal switch						
Limit switches	2 adjustable switches						
Auxiliary switches	2 adjustable dry switches						
Anti-condensation	Integrated						
Electrical connection	2 x PE M14 + 1,5m cable	2 x PE M20 + 1.5m cable	2 x PE M20 + 1,5m cable				

Actuator		TCR 11	N		TCR 20N		TCR 40N				
Voltage	12V DC	24V AC-DC	95-265V AC-DC	12V DC	24V AC-DC	95-265V AC-DC	12V DC	24V AC-DC	95-265V AC-DC		
Power (W)	100	100	100	50	50	50	80	80	80		
Current (A)	:	2,5	0,3 – 0,6	2		2		0,22		3,3	0,36
Fuse Protection (A)		5	2 - 3		3	5	8		2		


Information given as an indication only, and subject to possible modifications




2/8
FT2411 ENG
06
10/2023


# **CONSTRUCTION** (TCR-02N)


	TCR-02N								
No. Name Material No. Name Material									
1	Casing + lid	Plastic (ABS)	6	Rating plate	PVC				
2	Position indicator	Polycarbonate plastic	7	Key support	Plastic (ABS)				
3	Screw x 4	Aisi 304	8	Hex key	Steel				
4	Backup control stem	Aisi 304	9	Packing gland	Nylon				
5	Gasket	NBR	10	Cover gasket	NBR				
		Weight (I	kg): 0.6	20					

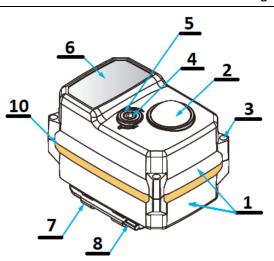

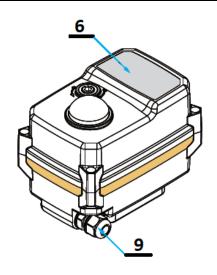


# **DIMENSIONS (mm)**

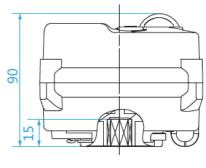

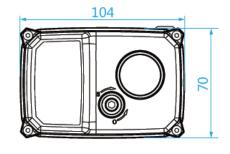



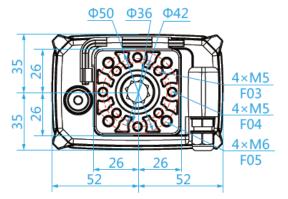


Information given as an indication only, and subject to possible modifications




3/8
FT2411 ENG
06
10/2023


# **CONSTRUCTION** (TCR-05N)


	TCR-05N								
No. Name Material No. Name Material									
1	Casing + lid	Plastic (ABS)	6	Rating plate	PVC				
2	Position indicator	Polycarbonate plastic	7	Key support	Plastic (ABS)				
3	Screw x 6	Aisi 304	8	Hex key	Steel				
4	Backup control stem	Aisi 304	9	Packing gland	Nylon				
5	Gasket	NBR	10	Cover gasket	NBR				
		Weight (I	kg): 1.8	00					

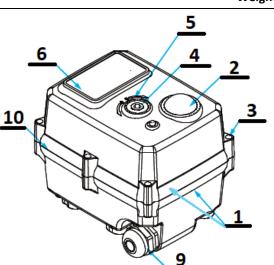

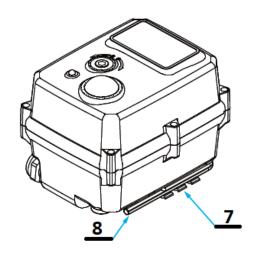


# **DIMENSIONS (mm)**

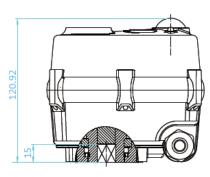

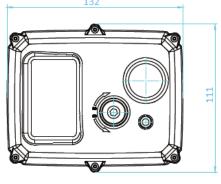



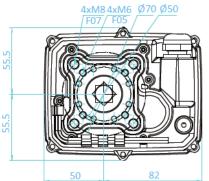


Information given as an indication only, and subject to possible modifications



Pages	4/8
Ref.	FT2411 ENG
Rev.	06
Date	10/2023

# **CONSTRUCTION** (TCR-11N)

TCR-11N					
No.	Name	Material	No.	Name	Material
1	Casing + lid	Plastic (ABS)	6	Rating plate	PVC
2	Position indicator	Polycarbonate plastic	7	Key support	Plastic (ABS)
3	Screw x 6	Aisi 304	8	Hex key	Steel
4	Backup control stem	Aisi 304	9	X 2Packing gland	Nylon
5	Gasket	NBR	10	Cover gasket	NBR
Weight (kg): 2.200		11	Cable gland unit	Plastic (ABS)	

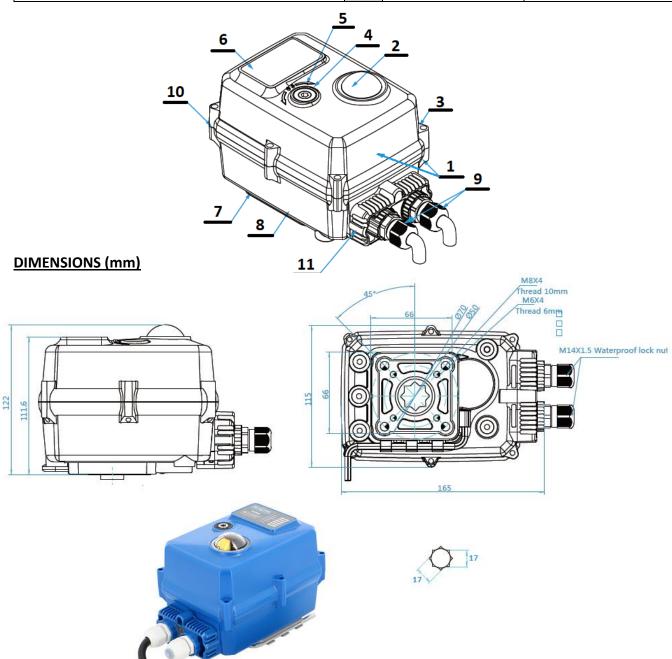


Information given as an indication only, and subject to possible modifications




Pages	5/8
Ref.	FT2411 ENG
Rev.	06
Date	10/2023

# **CONSTRUCTION** (TCR-20N / TCR-40N)

TCR-20N / TCR-40N					
No.	Name	Material	No.	Name	Material
1	Casing + lid	PC + PET	6	Clutch	Polyoxymethylene POM
2	Position indicator	Polycarbonate plastic	7	Key support	Plastic ABS
3	Screw x 6	Aisi 304	8	Hex key	Steel
4	Backup control stem	Aisi 304	9	X 2Packing gland	Nylon
5	LED	Transparent PC	10	Cover gasket	NBR
Weight (Kg) : 6,000		11	Cable gland unit	Plastic ABS	

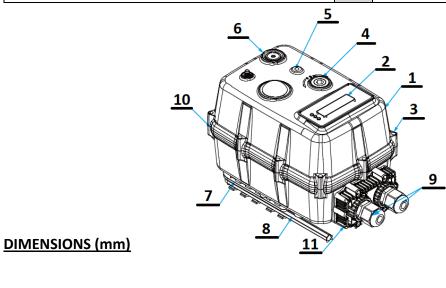

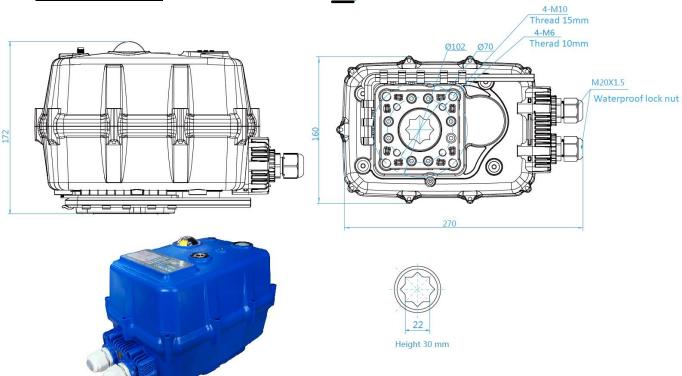

Information given as an indication only, and subject to possible modifications





6/8
FT2411 ENG
06
10/2023

## **WIRING DIAGRAM**


BU	Neutral (Blue)	
RD	Closing control (Red)	BU N/V-
вк	Opening control (Black)	RD OFF
WT	Information return to common (White)  Dry switch: 230V AC max 50 mA  230V DC max 500 mA	SW ON Fuse    SW ON Fuse   L/V+   Feedback_Com   Feedback_Com   Com   Co
GY	Opening return information (Grey) <u>Dry switch</u> : 230V AC max 50 mA  230V DC max 500 mA	GY Feedback_Open
BR	Closing return information (Brown) <u>Dry switch</u> : 230V AC max 50 mA  230V DC max 500 mA	PE Y/G
Y/G	Earth (Yellow / Green)	
	Black> Red> Blue> Grey> White> Brown> Yellow/Green>	BK RD BU GY WT BR Y/G

## **SWITCH SETTING**

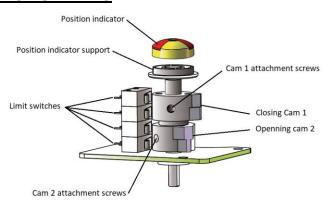


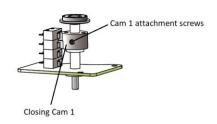

#### **CLOSING CAM ADJUSTMENT**

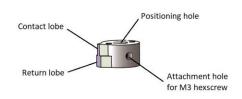

**GENERAL VIEW** 

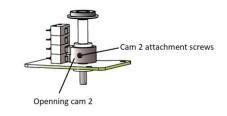

### **OPENING CAM ADJUSTMENT**

#### **CAM DETAIL**

Information given as an indication only, and subject to possible modifications



Pages	7/8
Ref.	FT2411 ENG
Rev.	06
Date	10/2023

# **TROUBLESHOOTING**

Defect met	Cause of defect	Method of solving	
	Non-connected electrical grid.	Connect to the electrical grid.	
	Wrong voltage.	Check the actuator's voltage.	
Inactive actuator	Motor overheating.	Check the torque on the valve.	
	Faulty connection.	Check the connection to the terminal box.	
	Damaged start capacitor.	Contact the supplier for repair.	
No suitale sissal	Faulty connection.	Check the connections.	
No switch signal	Damaged microswitch	Change the microswitch	
Valve that is not fully	Use the return signal from the actuator check.	Receiving a return signal does not mean that the actuator is fully closed, hence do not cut the power supply.	
closed	The hysteresis increases due to wear or between the actuator and the valve's stem.	Readjust the limit cams. Contact the supplier for repair.	
	Unsuitable cable cross-section being used.		
Presence of humidity or	The cable connection is not leak-tight.	Contact the supplier for repair.	
water in the actuator	Worn sealing gaskets.		
	Loose cover screws.	Dry the internal parts and tighten the cover screws.	



Pages	8/8
Ref.	FT2411 ENG
Rev.	06
Date	10/2023